

Technical Manual



09.015.01

**REMOVE AND INSTALL
REAR WHEEL**

STARK FUTURE




SAFETY WARNINGS

Observe your local health and safety guidelines. Ensure a safe working environment. Wear appropriate protective gear. Deviating from the prescribed order may result in injury or damage to the products.



TOOLS

ALN 10

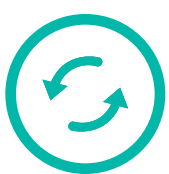

CONSUMABLES

Lithium grease



OPERATION TIME

8 Minutes

REMOVAL



WARNING

Before proceeding with any work on the bike, make sure it is turned off and the charger disconnected.

- 1 Loosen rear axle lock bolt
- 2 Push the lock bolt to be able to pull from the opposite side
- 3 Remove the lock bolt and chain tension adjuster
- 4 Remove axle
- 5 Release chain from the rear sprocket
- 6 Slide the wheel out

INSTALLATION



WARNING

Before proceeding with any work on the bike, make sure it is turned off and the charger disconnected.

- 1 Clean the wheel axle from any debris and apply lithium grease.
- 2 Slide the wheel in place



NOTE

Ensure the brake disc is on the brake caliper side and slides between the brake pads.

- 3 Fit the chain in the rear sprocket



NOTE

Gently wiggle the wheel to make it easier to slide the axle in.

- 4 Insert the rear axle
- 5 Install the chain tension adjuster



WARNING

Be careful not to catch your hand between the chain and the rear sprocket when proceeding with step #6

- 6 Insert a cloth between the chain and rear sprocket and spin the rear wheel backwards until the chain is tensioned
- 7 Tighten the axle nut to **80 Nm**
- 8 Remove the cloth
- 9 Spin the wheel by hand a few times and check the brake operation



WARNING

Check brakes operation before operating the bike.

starkfuture.com

ENG 2023-06

Copyright © 2023 Stark Future SL. All rights reserved.
Reproduction, even in part, as well as copying of all kinds,
is permitted only with the express written permission
of the copyright owner.

STARK FUTURE